

GUIDE FOR SMALL REMOTE CONTROL

Small remote control can do almost everything that the central remote control can do but you have to operate in a one by one fashion. The ref must carry one to fix the mistakes the central remote control might make, change parameters of one equipment without changing others or do some check, repair work.

Tip: There is one parameter that can't be set up by central remote control, i.e., the reference NO. of the equipments. You must set it up one by one with the small remote control.

Use the small remote control just like an ordinary TV remote control. Turn on the equipment; point the remote control to the laser sensor from 2 feet away to operate.

It is the best to do this from the back of the players so that you can watch the result of you input on the monitor, which locates at the back of the vest.

The small remote can be used to in three circumstances, which includes parameter setup before game starts, change parameters or status of one or multiple equipments during a game and equipment daily maintenance.

Parameters setup before Game starts

1. “Time”: press the key [time]. The input number of the game time can be 01(min) up to 99 (mins). “00” means no time limit. You need to set up the time limit to “00” if you want to manage time limit by central remot control.

2. “Magzine”: press the key [magzine], then input the desired numbers. “00” will be no limit.

3. “NO.” : press the key [NO.], then input the reference NO. , press [enter] to confirm. The reference NO. can be from 01 to 90.

4. “HP”: press the key [F1], then input the desired Hit Point, press [enter] to confirm. This number can be from 01 to 99.

5. “VIP”: press the key [F3], then input “01”, press [enter] to confirm, this equipment (player) will be set up as VIP. The VIP will have three more HP than normal player. Input “00” and then press [enter] can cancel the VIP setting.

Tip: central remote control can set up only 1 VIP per game. Use the small remote you can set up several if needed.

6. “Team”: press the key [F4], then input the reference number of divide. All the equipments in a game must be set up at the same value.

change parameters or status of one or multiple equipments during a game